


Tips


If you should install a Block Bar within a limited space, choose 2-step shorter one than the space and adjust by our "L-Connectors."

For an example as shown on the right, choose 6" Bar than 8" Bar for 9" space not to cause damages of wire connectors, and fill the remaining space up with two L-Connectors.

This will make wire connections more efficiently.

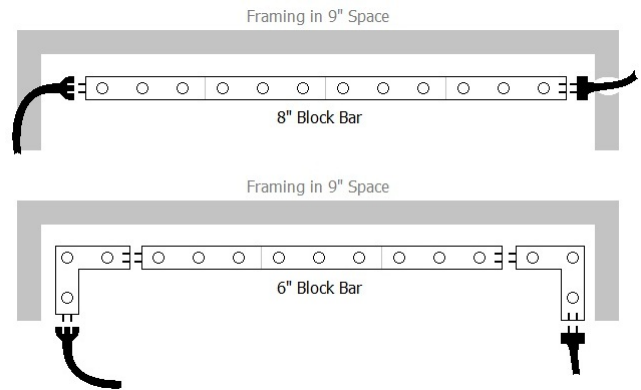

When you should induce power feeds in the middle area of framing, connect Block Bars as one of follows.

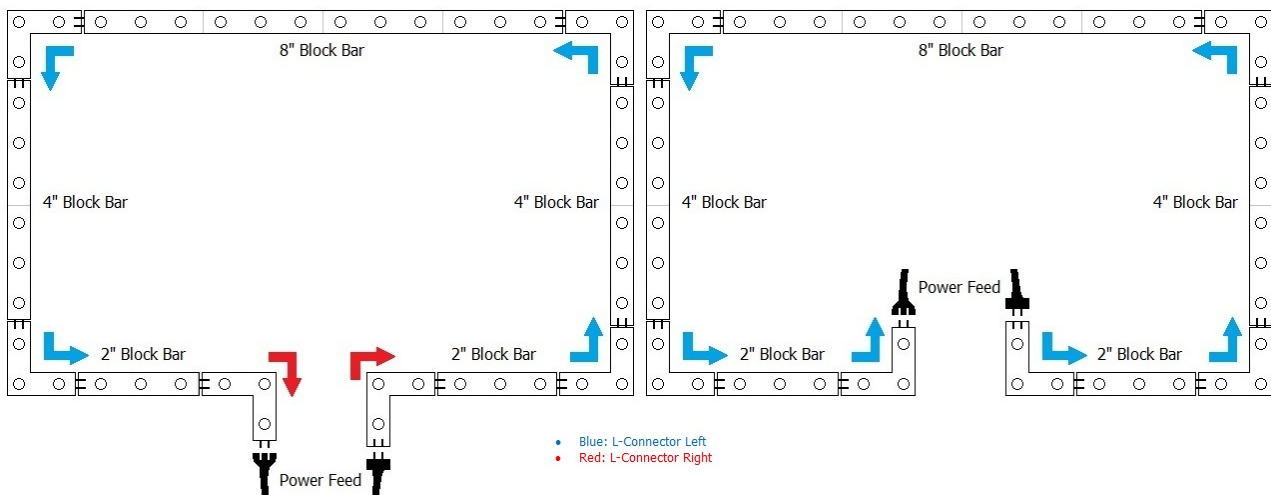

Or, when the power feed should be on the one edge, do it as below.

This will be good when you should gather all power feeds of multi-framing into one spot.

